# Spark Plug Rethreader Set

### 11305SQ

 Spark plug rethreader set is used for rethreading damaged spark plug threads in aluminum cylinder heads



# Double Size "L" Handle

#### 1586

• Material: Chrome vanadium alloy steel





KT NO.	Overall length		Size inch mm		χ <del>ά</del> λ	42/BB
***************************************	Inch	mm		mm		
1586-09	9	230	5/16 x 3/8	8 x 10	320	6 / 48

#### 1596


Material: Chrome vanadium alloy steel




KT NO.	Overall inch	length mm	Size inch	mm	\[ \arrage{\bar{a}} \]	8/8
1596-09	9	230	3/8	10	290	6 / 48

# Ribe Socket M10S

#### 9AW4911



- 6 points
- Use for replacing and removing idler pulley center screw on TOYOTA ALTIS
- 1/2" DR. socket ribe M10S for TOYOTA

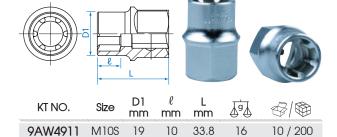

# Ribe Socket M12S

### 9AW4901



1/2"

- 6 points
- Use for replacing and removing engine head screw and flywheel center screw on NISSAN models
- 1/2" DR. socket ribe M12S for NISSAN



## Bearing Race and Seal Driver Set

### 9BA11

- Quick and easy to insert bearing race
- Collars fit most standard wheel bearing sizes
- Helps reduce damage to both race and axle housing
- 9 collar sizes:

(1)1.574"/40mm (2)1.732"/44mm (3)1.968"/50mm (4)2.322"/59mm (5)2.480"/63mm (6)2.559"/65mm (7)2.834"/72mm (8)2.992"/76mm (9)3.189"/81mm

Æሜ 1.8 🕏/፡ጩ1 / 10





