


CV Boot Clamp Pliers with Socket

9BB13

- Used to remove and install stainless CV boot clamp
- Can be used with 3/8" flexible handle bar or torque wrench
- Suitable for Audi, Opel, Citroen, SEAT, BMW, Mercedes-Benz, Honda, Nissan, Mazda, Ford, GM, Chrysler

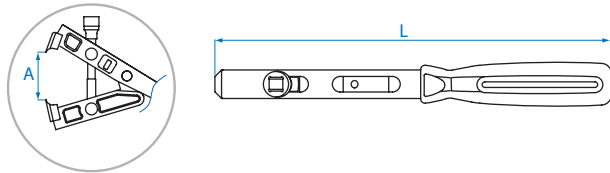


KT NO.	inch	L mm	A max mm	g	Box / Carton
9BB13	11	278	45	888	6 / 24

CV Boot Clamp Installer

9BB31

- Used to cut and install clamp with built-in cutting arm
- Includes locking device and ratchet function
- Suitable for general vehicle types

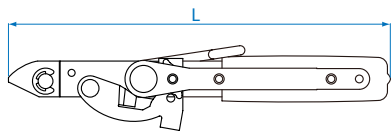

Lock



Cut



KT NO.	inch	L mm	g	Box / Carton
9BB31	6-1/2	124	347	12 / 36

CV Joint Assembly Removal Tool

9BB42

- Separates the CV Joint from the axle without removing the drive shaft
- Reduces the risk of damaging the transmission, or the CV joint
- Multiple hole pattern allows adjustment to different depths
- Suitable for most vehicles equipped with Constant Velocity U-joints


1.77 kg / 1 / 10



Exhaust Pipe Hanger

9BP11

- Used to remove rubber holders from exhaust brackets
- Suitable for general vehicle types

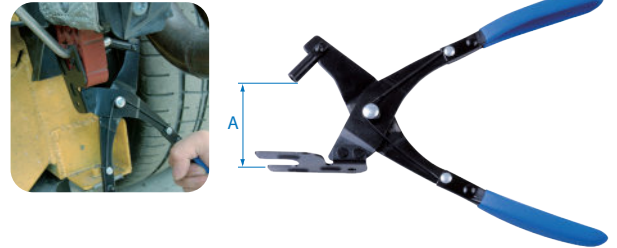

KT NO.	inch	L mm	A max mm	g	Box / Carton
9BP11	10	250	60	339	12 / 36

Exhaust Clamp Pliers

9BP21

- Used to remove and install exhaust clamps
- Include spring and locking mechanism
- Suitable for Citroen/Peugeot, Renault and prizing open types of exhaust clamps



KT NO.	inch	L mm	A max mm	g	Box / Carton
9BP21	12	300	60	496	12 / 36

